



MPV-01




MPV-02

1. FILTER(Normal filtration and vacuuming)
2. BACKWASH(Cleaning filter by reversing the flow)
3. RINSE(Used after backwash to flush dirt from valve)
4. WASTE(By-passes filter, used for vacuuming to waste or lowering water level)
5. RECIRCULATE(By-passes filter for circulating water to pool)
6. CLOSED(Shuts off all flow to filter or pool)
7. WINTERIZE(This device is used to prevent free zing)(ONLY EIGHT POSITION)
8. SERVICE(The screw on the handle should be replaced when repairing).(ONLY EIGHT POSITION)



MPV-03

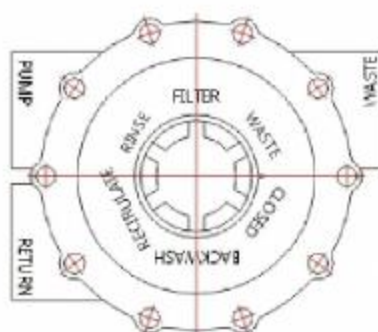

MPV-04

Model No	Vale Positions	Pipe Size (inch)	Body Color	Mounting Location	NW(KG)	GW(KG)	Package(mm)
EPL-MPV-01	8	1.5	White	Top	2.4	3.2	217*217*325
EPL-MPV-02	6	2.0	Black	Top	4.3	4.8	285*250*380
EPL-MPV-03	8	1.5	Black	Side	2.6	3.4	245*205*380
EPL-MPV-04	6	2.0	Black	Side	4.0	5.0	300*285*505